

Communication connectors

Contaminated air enters here

Micro-USB socket

5. In Air-vent

6. Charging Port

KEY FEATURES

ACTIVE SANITIZATION

Plascide's Micro-lightning Anti-aerm & VOCs technology



FILTER-LESS PROCESS No germ-filled filters No replacement cost



RAPID FFFFCTIVENESS Sanitize within seconds



CORDLESS PROTECTION Hours of battery operation Wherever you go


PACKAGE CONTENT

- Air Halo Sanitizer
- Li-ion battery (Installed)
- Manual
- 4. Warranty Card


OUICK START GUIDE

Preparation before use:

- Remove any protective film(s)
- 2. Remove battery protector's pull-out
- Charge the Air Halo until battery is full Please see:



6.4 Charging



- Out air-vent cover.
- Do not block the In or Out air-vents during operation.
- 10. Do not incinerate the Li-ion battery. Recycle or dispose separately from household waste.



- Handle with care. Air Halo can be damaged if dropped, burned, punctured or crushed
- Do not operate if damaged and/or when the case is broken to avoid potential injury.
- Charge with a USB cable and a compatible USB power adapter at 2A or higher.
- Do not charge or operate with damaged USB cables or USB power adapters.
- Keep dry during operation and storage. Do not operate if wet and/or immersed in any liquid to avoid potential injury and/damages to properties.
- Do not allow infant or voung children to operate
- Do not insert any objects into the vents
- 8. Do not operate without the



Control Button

Press and hold (b) to turn on or off

OPERATION GUIDE

2. Press (b) once to cycle the different modes, LED will flash when cycled

6.2 Operational Modes

MODE	TYPICAL USAGE
NORMAL	EVERYDAY OPTIMIZED POWER
BOOST	MAX COVERAGE FOR DEMANDING SITUATION
SILENT	LOWER POWER FOR QUIET ENVIRONMENT

6.3 Mode Selection


Immediately after turning on, the default power level is set to Normal.

-NORMAL---(¹)---

BOŌST

PRESS ()

- SILENT ----(¹)--



Charaina

- Charge with a Micro-USB compatible cable
- Connect the Micro-USB plug to the Air Halo
- Connect the USB plug to a power adapter


CONDITION	LED
BATTERY LOW	LONG FLASHES
CHARGING	SHORT FLASHES
BATTERY FULL	ON

AIR HALOS IN A PAIR

Pairing allows two Air Halos to function as one when placed together or occupy the same cupholder. Control both units from one button and charge from one USB cable.

7.1 Air Halo Pairing

- Place the rear flat face of the Air Halos together
- 2. Alian the connectors at the bottom
- 3. Both units will snap together magnetically
- 4. Air Halos will begin pairing automatically within seconds
- 5. Synchronised paired control will now be enabled



7.2 Cancel Pairing

To cancel pairing of the Air Halos, simply separate again.

7.3 Mode Selection when Paired

Press (1) on any unit will control both. For more details see: 6.1 Control Button

7.4 Charge When Paired

Only one USB cable connected is required to charge both units when using a generic power adapter at 4A or higher.

For more details see: **6.4** Charging

MAINTENANCE

8.1 Cleaning recommendation Before cleaning please **Turn Off**.

- Surfaces: Slightly damp cloth
- 2. In-vent: Cotton bud & vacuum
- 3. Out-vent: Wash dust filter & vacuum

8.2 Surfaces


Use a slightly damp cloth to wipe clean any blemish or dirt on the surface.

8.3 In-vent


Vacuum the in-vent carefully, use a cotton bud to remove dirt and dust from between the vents.

8.4 Out-vent

- Insert a small and thin tool into the pinhole
- 2. Push firmly until it clicks and/or the vent cover pops out
- 3. Remove the dust filter, wash clean and dry




- 4. Vacuum clean any dust or obstruction within
- Return the dry dust filter and align vent cover
- Push vent cover down until it locks securely



8.5 Battery Replacement

CAUTION: Replacing the Li-ion battery incorrectly will severely damage your Air Halo. To replace the rechargeable Li-ion battery:

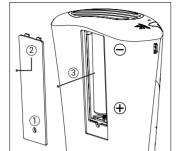

- Unscrew the fastener Remove the
- battery cover Replace battery

with Positive

(+) end facing downwards Re-fasten the battery cover

SUBJECT TO CHANGE WITHOUT PRIOR NOTICE

8.6 Battery Disposal

Damaged Li-ion battery should be recycled or disposed separately from household waste.

8.7 Repair

Maintenance repair by user is not advised. For more details please see: 11.1 Warranty

SPECIFICATIONS

Model: AH01

Power Mode: Silent / Normal / Boost

Weight: 325g

- Air Sanitizer Technology: Plascide reactors
- Recommend Usage: Personal space
- Input: 5V ==== 2.1A
- Li-ion Battery: 18650 (cylinder-type)x1
- Dimension: 183mm (H), 63mm-83mm (W), 34mm-63mm (D)

TROUBLESHOOTING

10.1 Diagnostic

SYMPTOM	DIAGNOSIS	ACTION
LONG LED FLASHES	BATTERY LOW	PLUG POWERED USB CABLE
SUDDENLY TURN OFF	BATTERY EMPTY	PLUG POWERED USB CABLE
SHORT LED FLASHES	CHARGING	-
STEADY ON	BATTERY FULL	UNPLUG POWERED USB CABLE
NO RESPONSE	BATTERY EMPTY	PLUG POWERED USB CABLE
VERY SHORT OPERATION TIME EVEN AFTER FULL CHARGE	BATTERY DAMAGED	PLEASE SEE: 8.5 Battery Replacement
FAN SLOW DOWN WHEN POWERED USB CABLE PLUGGED	USB POWER	REQUIRE USB POWER ADAPTER WITH 2A OR HIGHER
FAN SLOW DOWN WHEN PAIRED & POWERED USB CABLE PLUGGED	INADEQUATE	
FAN/LED RESPONSE ONLY WITH POWERED USB CABLE PLUGGED	BATTERY DAMAGED	PLEASE SEE: 8.5 Battery Replacement
NO LED/FAN RESPONSE WITH POWERED USB CABLE PLUGGED & NO BATTERY	PRODUCT FAULT	PLEASE SEE: 11.1 Warranty

SERVICE & SUPPORT

Warrantv

- Air Halo is covered by a manufacturer quarantee and warranty
- Self-repair and/or signs of tampering will void the warranty
- Repairs should only be carried out by a certified person
- Please refer to the included warranty card for more details

11.2 Contact

If your warranty card or any accessories are missing, please contact your nearest service centre or alternatively contact the main office:

> TEL: (+852) 21531812 FAX: (+852) 21531813

EMAIL: cs@a-onetech.com.hk WEB: www.a-onetech.com.hk






AIRHALO

PORTABLE AIR SANITIZER



INSTRUCTION MANUAL P/N: AH01G/AH01P/AH01T Model: AH01

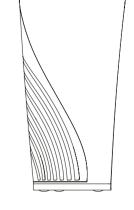

OVERVIEW KEY FEATURES PACKAGE CONTENT OUICK START GUIDE SAFETY PRECAUTIONS OPERATION GUIDE AIR HALOS IN A PAIR MAINTENANCE SPECIFICATIONS





